 
 


組み立て手順

 
組み立てる前に、部品が揃っていることを確認してください。

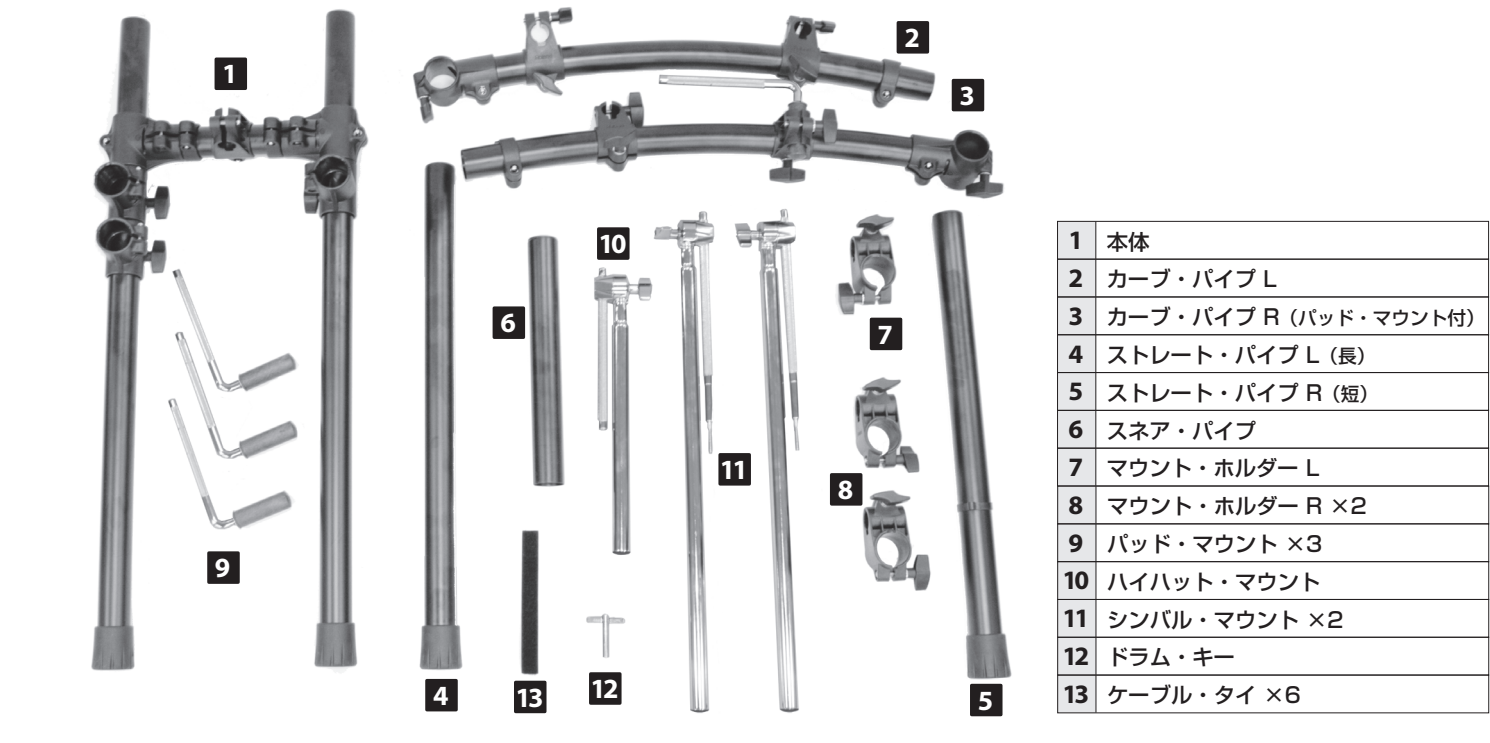


完成図

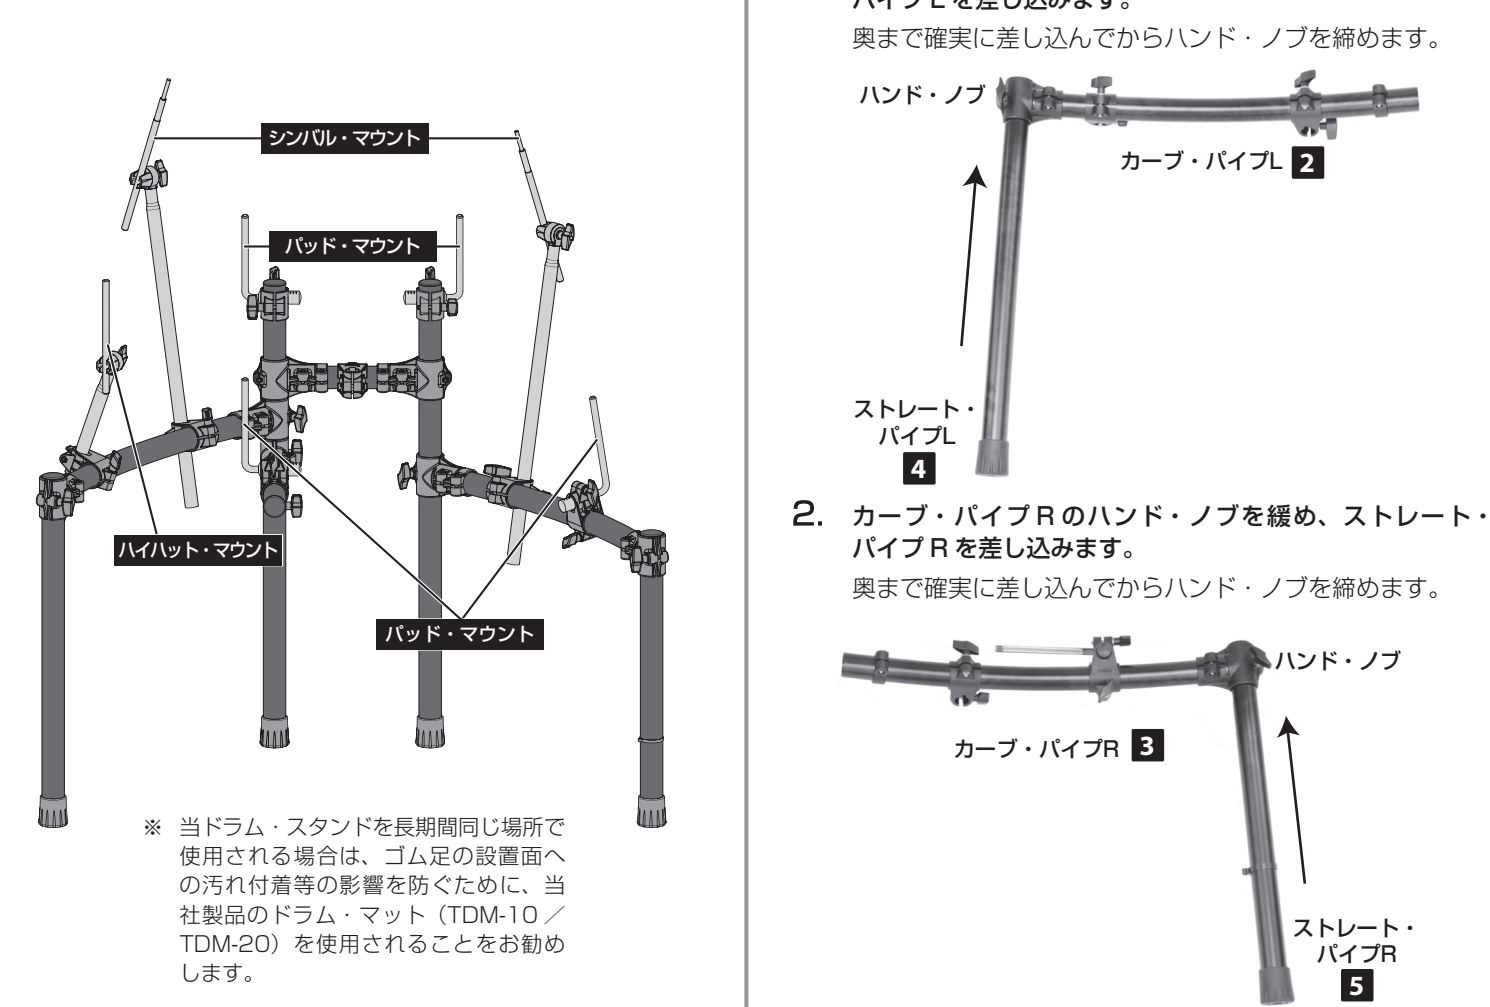


7. 本体を立て、ハンド・ノブ D (2箇所) を緩めて左右のパイプを開きます。
ぐらつく場合は、ハンド・ノブ E (2箇所) を緩めて高さを調節します。
高さを調節した後で、ハンド・ノブ D と E を締めます。

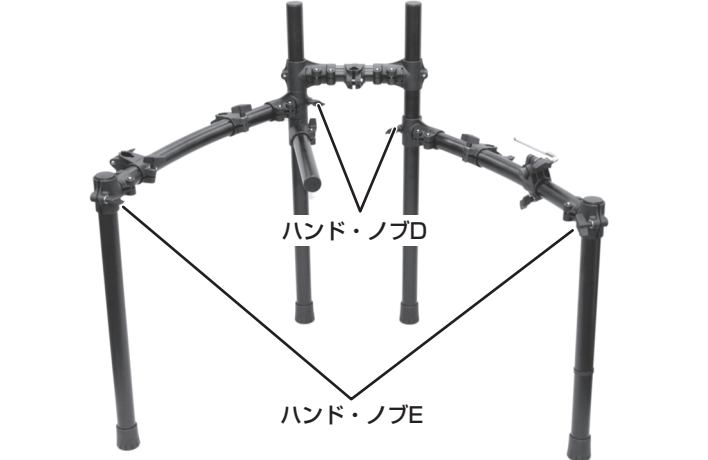

 
8. 本体上部の左側にマウント・ホルダー L を、右側にマウント・ホルダー R を取り付け、それぞれのハンド・ノブを締めます。

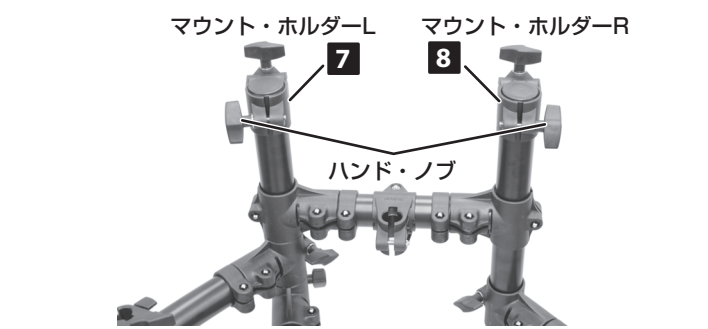

 
9. マウント・ホルダー L とマウント・ホルダー R にパッド・マウントを取り付け、それぞれのハンド・ノブを強く締めます。
※ パッド・マウントの先端はとがっています。取り扱いに注意して作業してください。

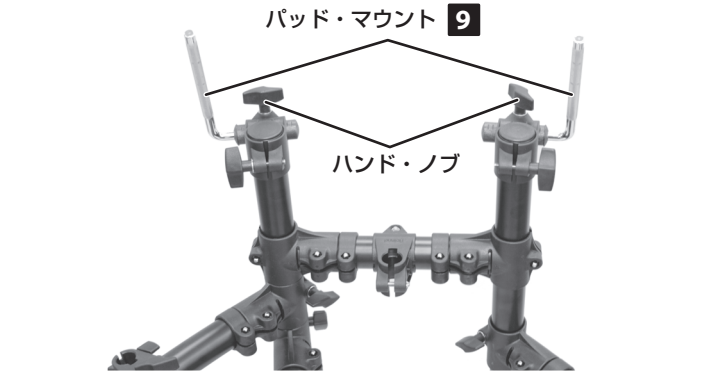

 
10. スネア・パイプにマウント・ホルダー R を取り付け、ハンド・ノブを締めます。

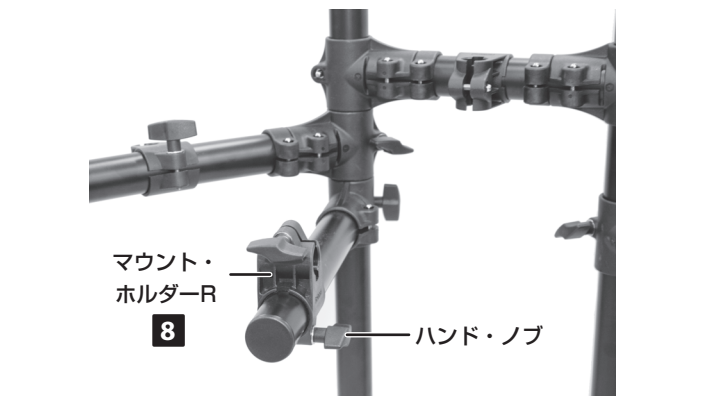

 
1. カーブ・パイプ L のハンド・ノブを緩め、ストレート・パイプ L を差し込みます。
奥まで確実に差し込んでからハンド・ノブを締めます。

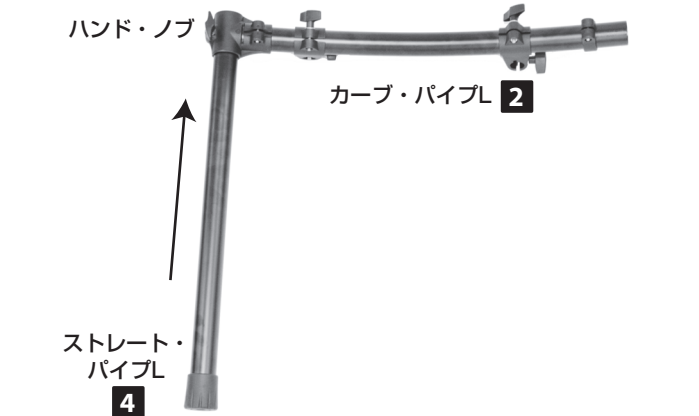

 
2. カーブ・パイプ R のハンド・ノブを緩め、ストレート・パイプ R を差し込みます。
奥まで確実に差し込んでからハンド・ノブを締めます。

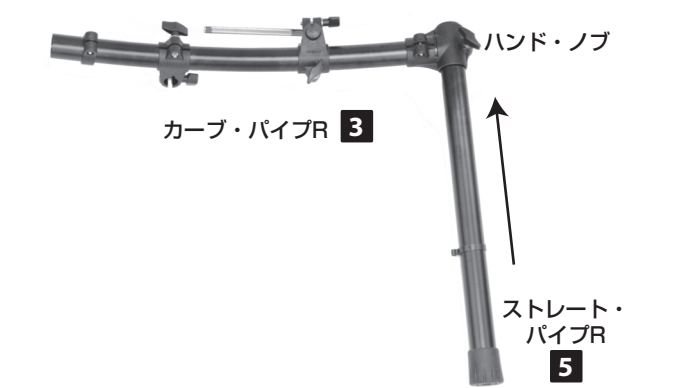

 11. マウント・ホルダー R にパッド・マウントを取り付け、ハンド・ノブを強く締めます。

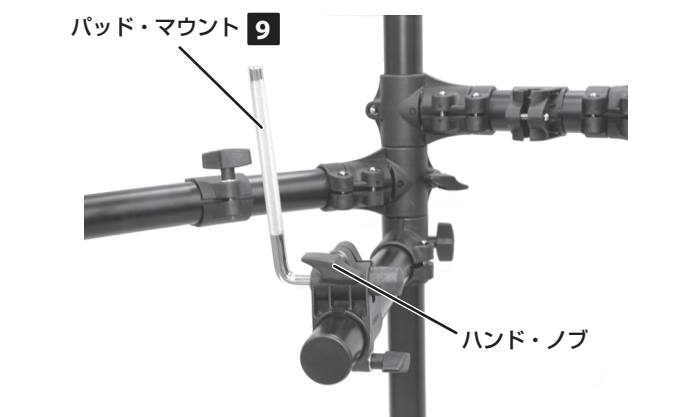

 
12. シンバル・マウント (2本) とハイハット・マウントをカーブ・パイプのホルダーに差し込み、図のようにすべてのホルダーを調整して完成です。
※ シンバル・マウントの先端はとがっています。取り扱いに注意して作業してください。

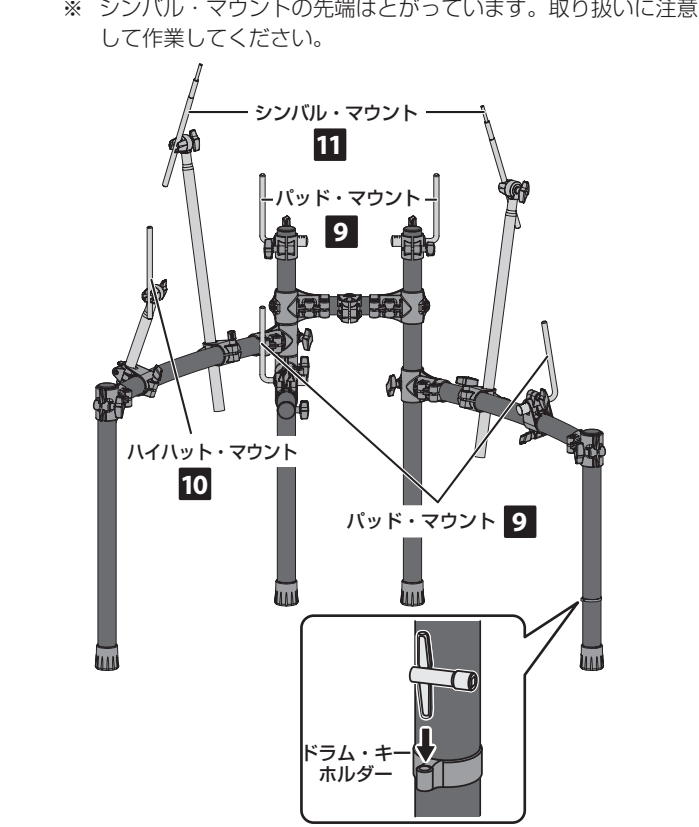

※ 組み立て完了後、ドラム・キーは、ドラム・キー・ホルダーに取り付けておいてください。

ご注意

 - 音源、パッド、シンバルの取り付け方法については、お使いの製品の取扱説明書をご覧ください。
- パッド・マウントを、右図の矢印の示す方向に動かして、取り付け位置を微調整することができます。
※ パッド・マウントの先端部分 (A) が、必ずホルダーから出ているように調整してください。
- 両端のスタンド脚パイプの距離を 1.0m 以上離さないでください。
- MDS-4 は、出荷時は右利きのドラマー用にセットアップされています。左利き用に変更を希望される場合は、ローランドお客様相談センターにご相談ください。

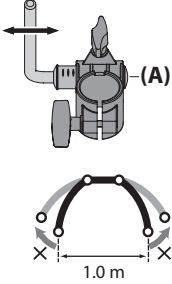

この機器を正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、この機器の優れた機能を十分に理解いただくためにも、取扱説明書をよくお読みください。

 
 
© 2009 ローランド株式会社
本書の一部、もしくは全部を無断で複写・転載することを禁じます。




※ 手順 3 ～ 6 までは、本体を立てずに、床に寝かせた状態で組み立ててください。

3. ドラム・キーでホルダー A のボルトを緩め、手順 1 で組み立てたカーブ・パイプ L を、本体のホルダー A に差し込みます。

このとき、メモリー・ロックがホルダー A の溝にはまるようにカーブ・パイプ L を差し込みます。
奥まで確実に差し込んでから、ドラム・キーでボルトを強く締めます。

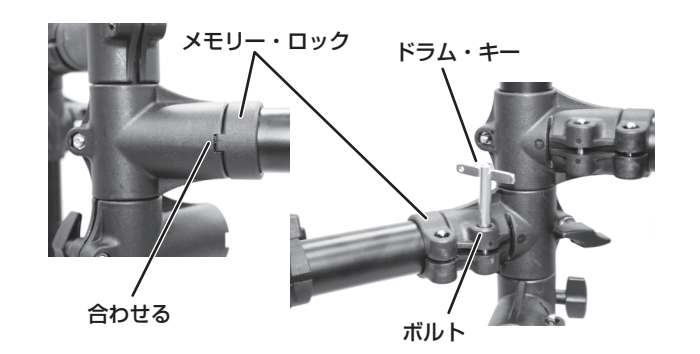
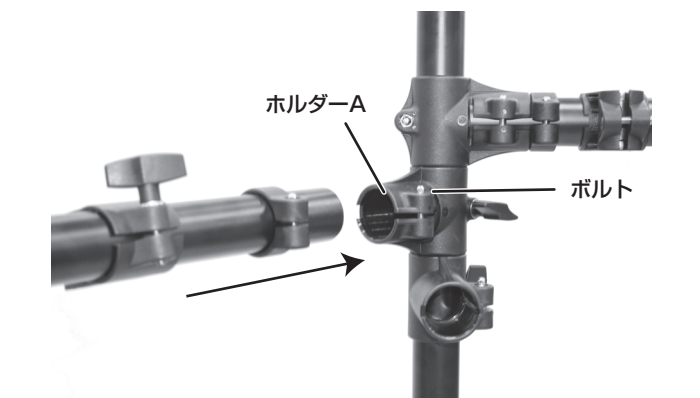


 4. 本体右側のパイプに付いているホルダー B を、本体左側のパイプに付いているホルダー C と同じ位置まで下げます。

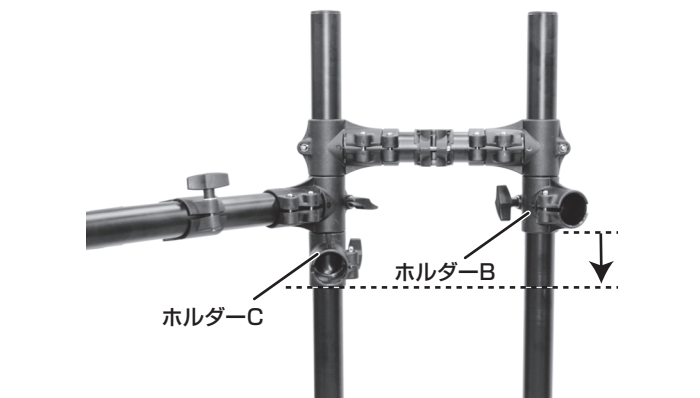


5. ドラム・キーでホルダー B のボルトを緩め、手順 2 で組み立てたカーブ・パイプ R を、本体のホルダー B に差し込みます。

   このとき、メモリー・ロックがホルダー B の溝にはまるようにカーブ・パイプ R を差し込みます。
奥まで確実に差し込んでから、ドラム・キーでボルトを強く締めます。

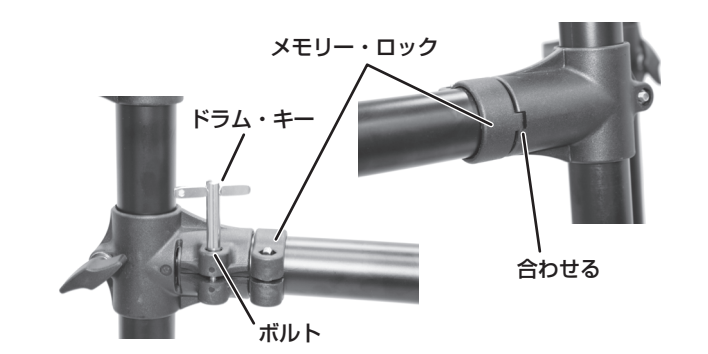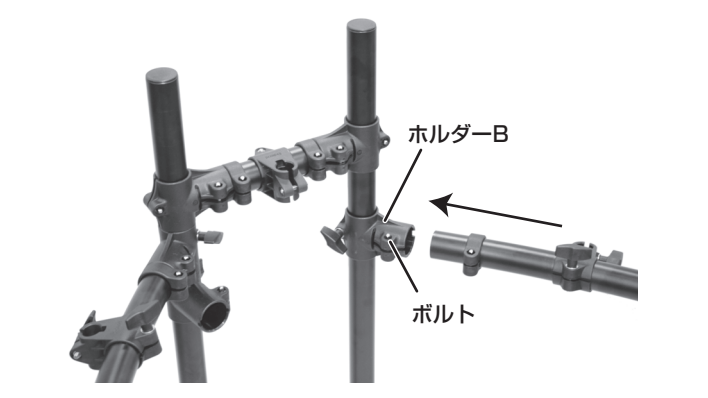

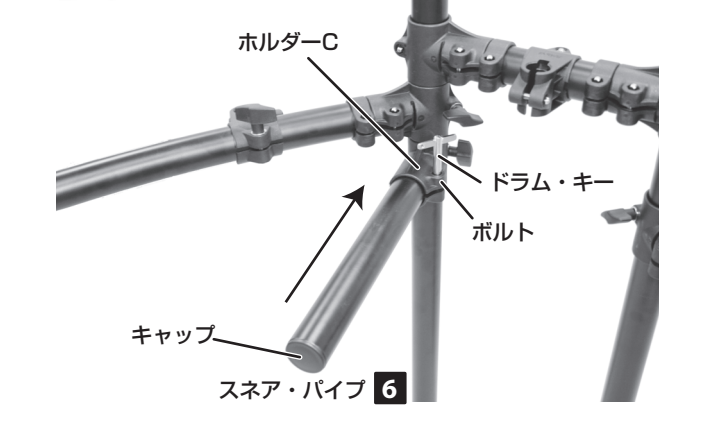

6. ドラム・キーでホルダー C のボルトを緩め、スネア・パイプを本体のホルダー C に差し込みます。奥まで確実に差し込んでからドラム・キーでボルトを強く締めます。
※ スネア・パイプは、図のようにキャップが手前側になるように差し込んでください。






安全上のご注意

火災・感電・傷害を防止するには

△ 警告と △ 注意の意味について

	警告 取扱いを誤った場合に、使用者が死にまたは重傷を負う可能性が想定される内容を表わしています。
	注意 取扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表わしています。 ※ 物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表わしています。

図記号の例

	△は、注意 (危険、警告を含む) を表わしています。 具体的な注意内容は、△の中に描かれています。 左図の場合は、「一般的な注意、警告、危険」を表わしています。
	⊘は、禁止 (してはいけないこと) を表わしています。 具体的な禁止内容は、⊘の中に描かれています。 左図の場合は、「分解禁止」を表わしています。
	●は、強制 (必ずすること) を表わしています。 具体的な強制内容は、●の中に描かれています。 左図の場合は、「電源プラグをコンセントから抜くこと」を表わしています。

..... 以下の指示を必ず守ってください

△ 警告

● この機器を分解したり (取扱説明書に記載されている指示を除く)、改造したりしないでください。

● 修理 / 部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランドお客様相談センターに相談してください。

● 次のような場所に設置しないでください。
○ 温度が極端に高い場所 (直射日光の当たる場所、暖房機器の近く、発熱する機器の上など)
○ 水気の近く (風呂場、洗面台、濡れた床など) や湿度の高い場所
○ 湯気や油煙が当たる場所
○ 塩害の恐れがある場所
○ 雨に濡れる場所
○ ほこりや砂ぼこりの多い場所
○ 振動や揺れの多い場所

● この機器を、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。

● この機器に、異物 (燃えやすいもの、硬貨、針金など) や液体 (水、ジュースなど) を絶対に入れないでください。

● お子様のいるご家庭で使用する場合、お子様の取り扱いやいたすに注意してください。必ず大人のたが、監視 / 指導してあげてください。

● お子様をスタンドのまわりで遊ばせないでください。スタンドなどが倒れてけがをする恐れがあります。

● この機器を落としたり、この機器に強い衝撃を与えないでください。

△ 注意

● 接続したコードやケーブル類は、複雑にならないように配線してください。特に、コードやケーブル類は、お子様の手が届かないように配線してください。

● この機器の上に乗ったり、機器の上に重いものを置かないでください。

● 取り外したネジ、ワッシャー、ボルト、ナット、チューニング・ポルト・スプリング、ハンド・ノブや付属のケーブル・タイは、小さなお子様が誤って飲み込んだりすることのないようお子様の手の届かないところへ保管してください。

● スタンドを使用するときにはクランプ / ノブやネジを確実に締めてください。特に演奏前には確実に取り付けられているかどうか確認してください。確実に取りつられていないとパッドやマウントが落下してけがをする恐れがあります。

● スタンドをセッティング及び収納する際は、スタンドを持っている指をはさまないように注意してください。

お問い合わせの窓口

● 製品に関するお問い合わせ先

ローランドお客様相談センター 050-3101-2555

電話受付時間： 月曜～土曜日 10:00～17:30 (年末年始を除く)

※IP電話からおかけになって繋がらない場合には、お手数ですが、電話番号の前に「0000」(ゼロ4回) をつけてNTTの一般回線からおかけいただくか、携帯電話をご利用ください。
※上記窓口の名称、電話番号等は、予告なく変更することがありますのでご了承ください。

 
● 最新サポート情報

製品情報、イベント / キャンペーン情報、サポートに関する情報など


ローランド・ホームページ <http://www.roland.co.jp/>

How to Set Up the Stand

Before you start assembling the stand, make sure that you have all of the parts.

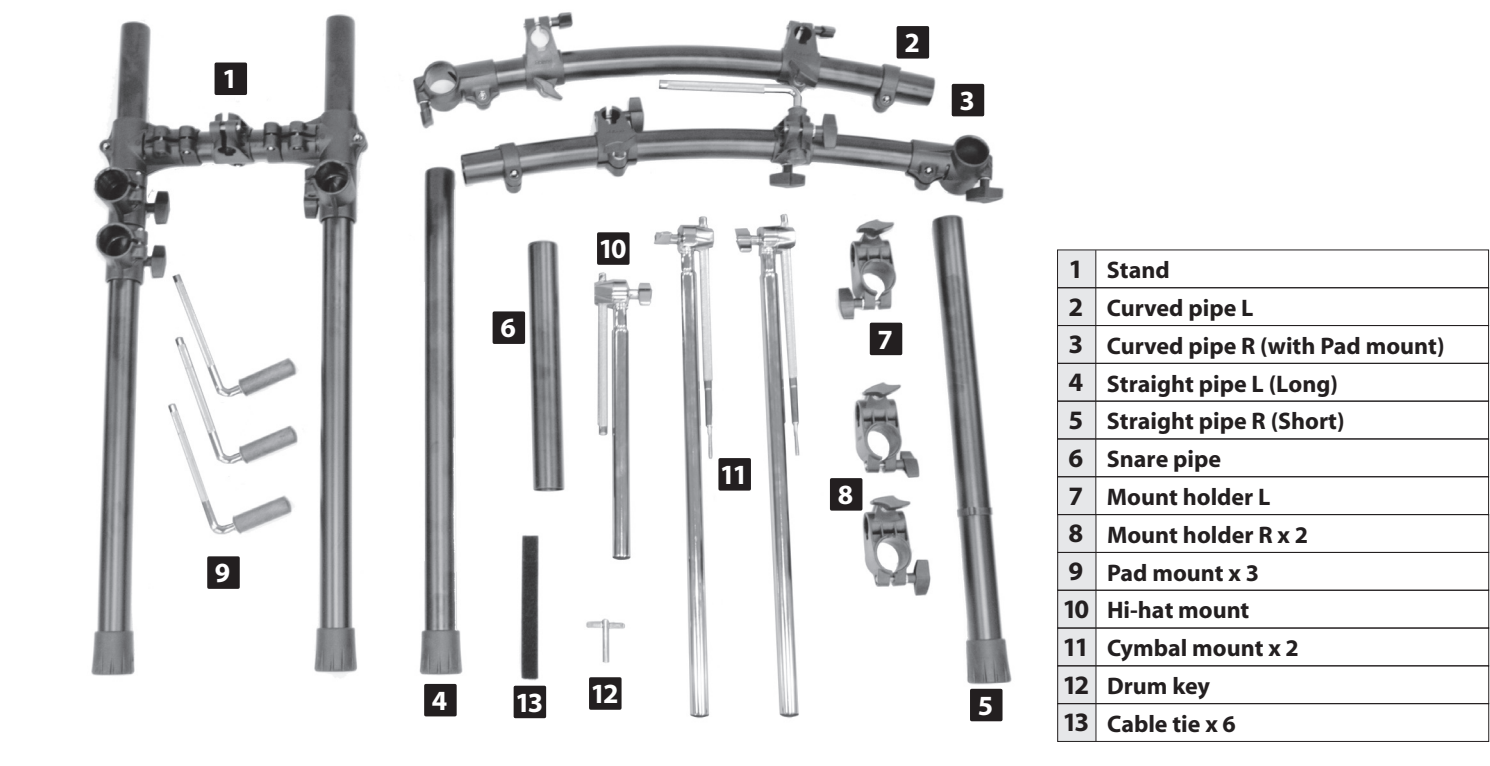


Fully Assembled View

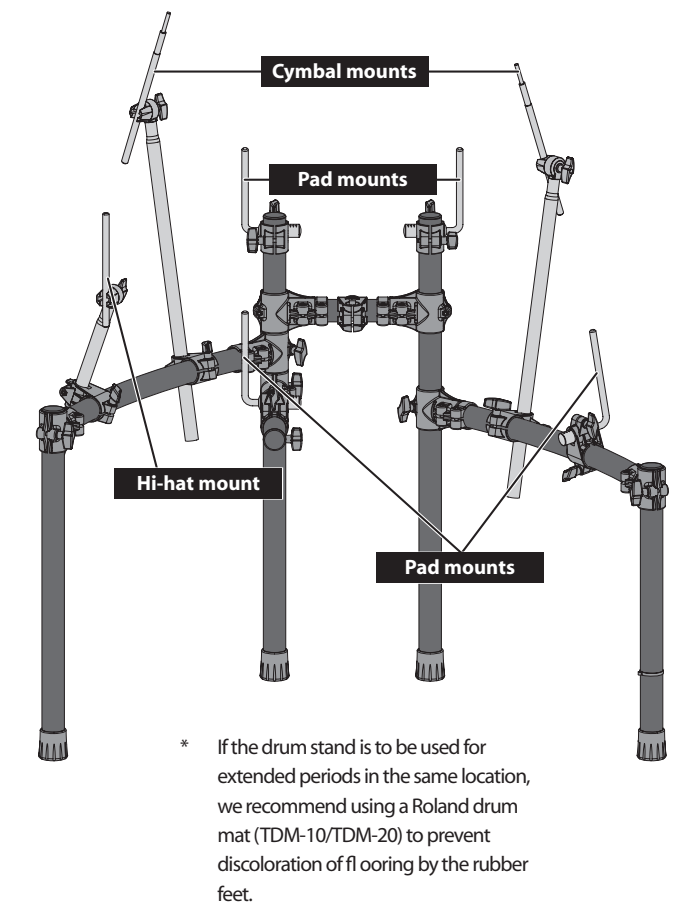 


7. Place the stand upright, loosen hand knobs "D" (two locations), and spread the left and right pipes apart.

 If the stand wobbles, loosen hand knobs "E" (two locations) and adjust the height. After you've adjusted the height, tighten hand knobs "D" and "E."

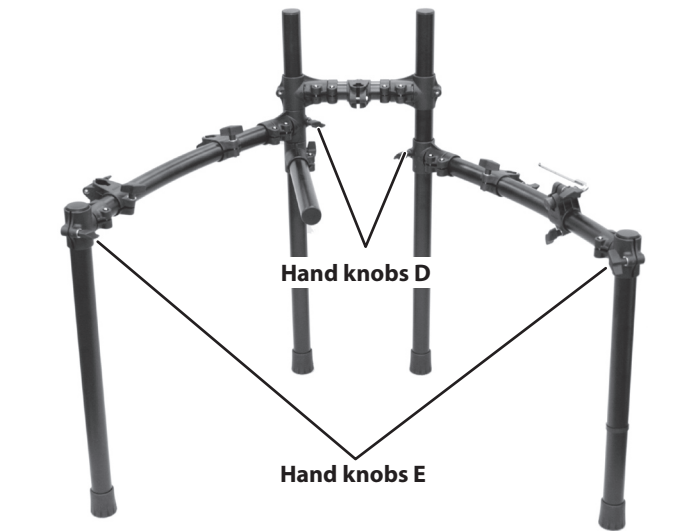


8. Attach mount holder "L" to the top left of the stand, attach mount holder "R" to the top right of the stand, and tighten the respective hand knobs.

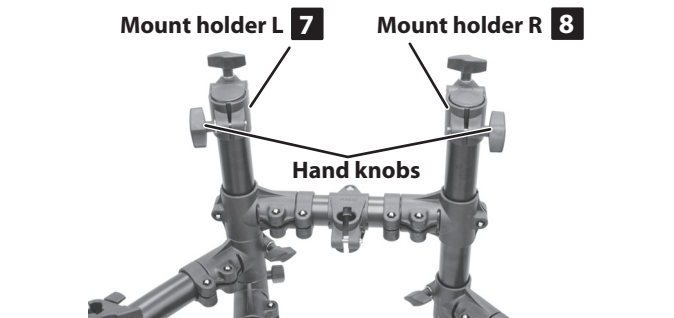 


9. Attach the pad mounts to mount holder "L" and mount holder "R," and firmly tighten the respective hand knobs.

 * The tips of the pad mounts are sharp. Handle them with care.

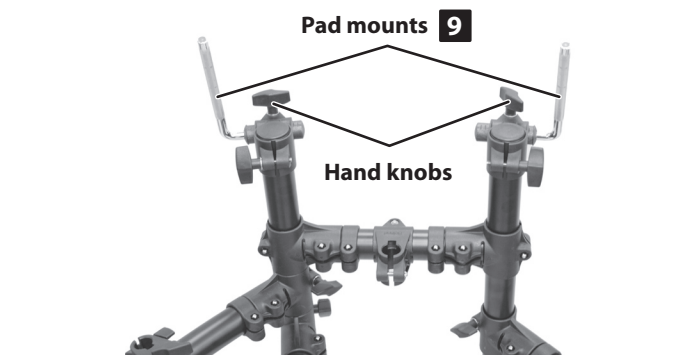


10. Attach mount holder "R" to the snare pipe, and tighten the hand knob.

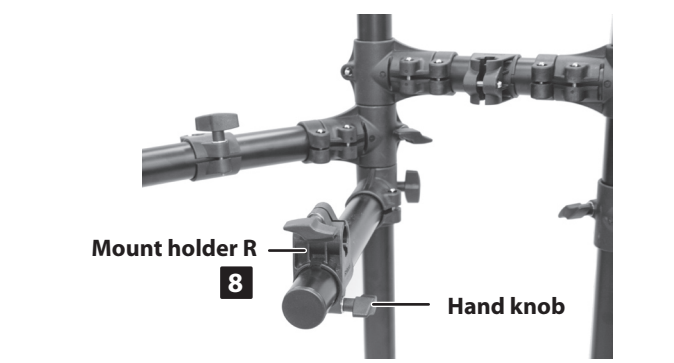 


1. Loosen the hand knob of curved pipe "L," and insert straight pipe "L" into it.

 After firmly inserting it all the way, tighten the hand knob.

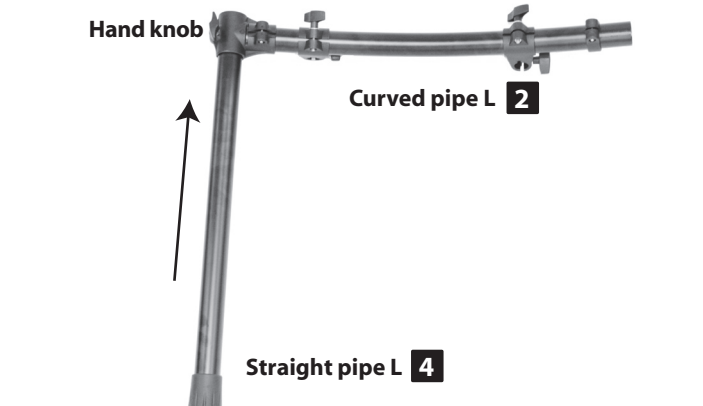


2. Loosen the hand knob of curved pipe "R," and insert straight pipe "R" into it.

 After firmly inserting it all the way, tighten the hand knob.

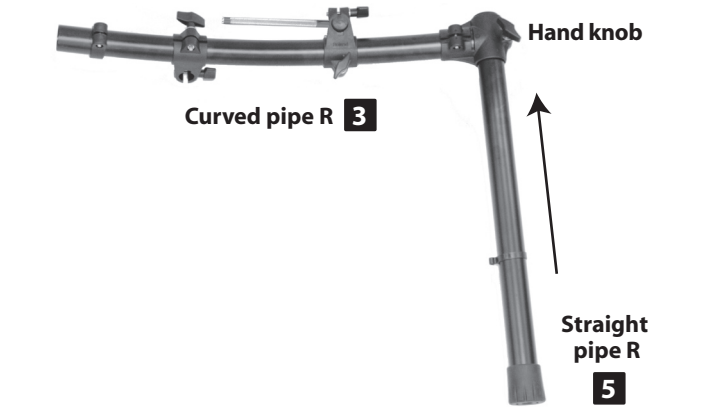


11. Attach the pad mount to mount holder "R," and firmly tighten the hand knob.

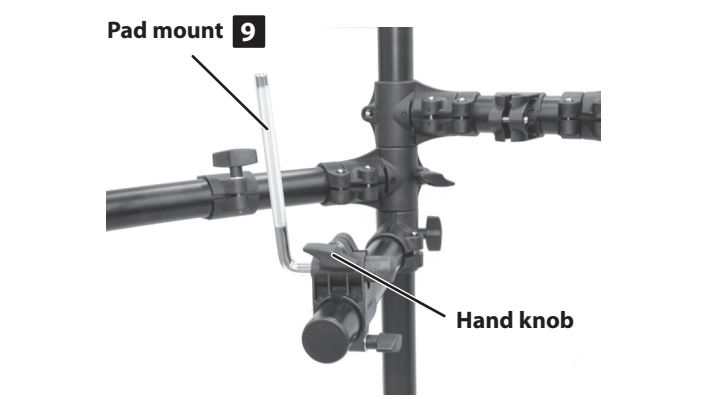 

12. Insert the two cymbal mounts and the hi-hat mount into the holders of the curved pipes, and adjust all the holders as followed in the illustration to complete setup.

 
* The tips of the cymbal mounts are sharp. Handle them with care.

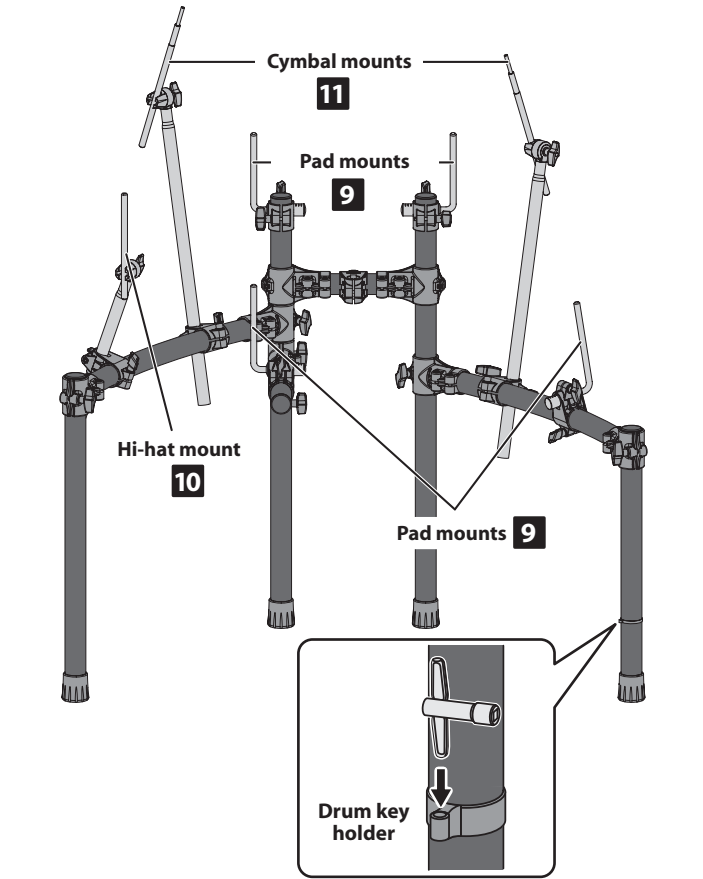

* After completing setup, please fix up the drum key on the drum key holder.

Notes

 - Regarding the way of mounting a Sound Module, Pads, or Cymbals, please refer to the Owner's Manual supplied with them.
- The pad mount can be adjustable to slide through the holder.
 - Please keep the top of the pad mount over the holder for securement in its adjustment.
- Do not spread the stand wider than 1.0 meters (40 inches).
- When the MDS-4 was shipped from the factory, it was configured for a right-handed drummer. If you wish to make left-handed set up, contact the nearest Roland Service Center, or an authorized Roland distributor.

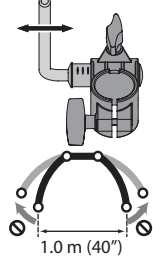


Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2009 ROLAND CORPORATION
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.


* Perform steps 3–6 of the assembly procedure with the stand laying down on the floor; do not place it upright yet.

3. Use a drum key to loosen bolt of the holder "A," and insert curved pipe "L" (of the assembly you created in step 1) into holder "A" of the stand.

 When doing so, insert curved pipe "L" so that the memory lock fits into the notch of holder "A."
After firmly inserting it all the way, use the drum key to firmly tighten bolt.

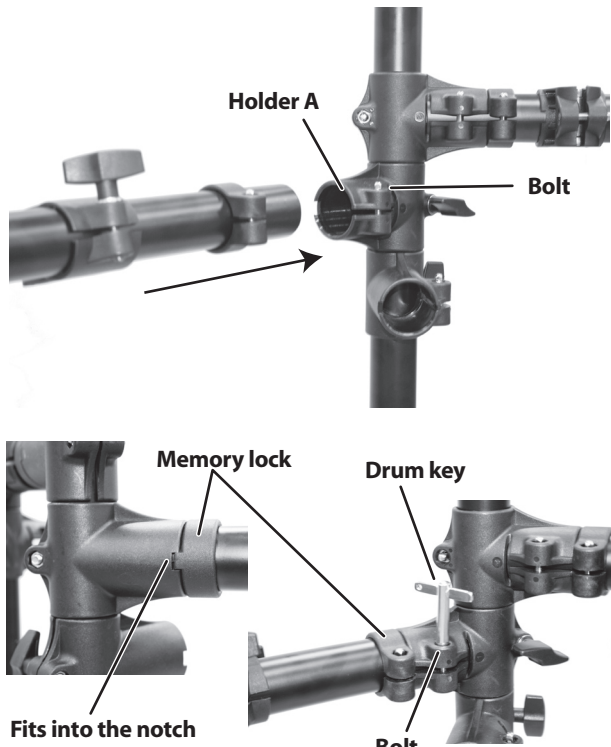


 4. Lower holder "B" (attached to the right-side pipe of the stand) to the same position as holder "C" (attached to the left-side pipe of the stand).

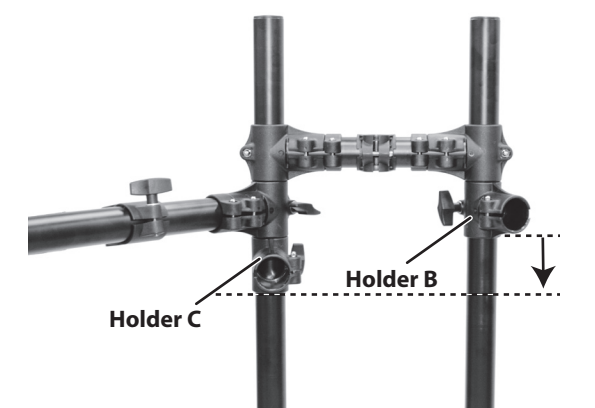


5. Use the drum key to loosen bolt of the holder "B," and insert curved pipe "R" (of the assembly you created in step 2) into holder "B" of the stand.

 When doing so, insert curved pipe "R" so that the memory lock fits into the notch of holder "B."
After firmly inserting it all the way, use the drum key to firmly tighten bolt.

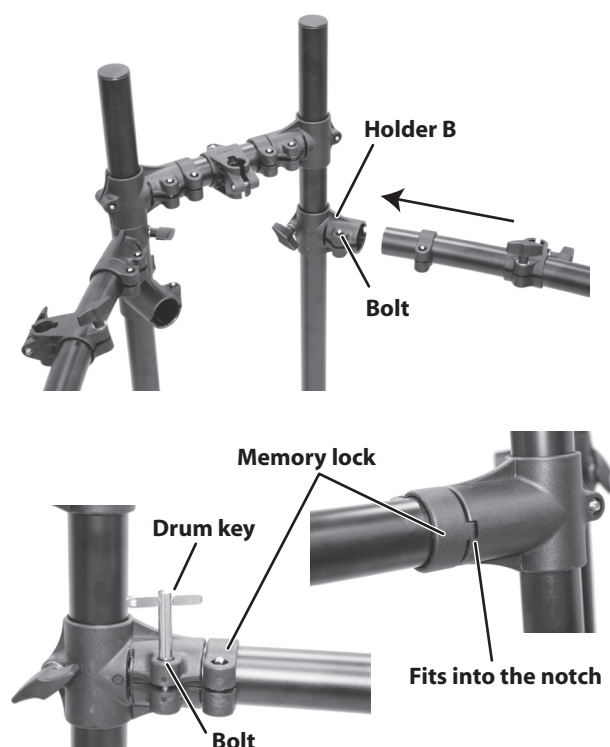

 6. Use the drum key to loosen bolt of the holder "C," and insert the snare pipe as shown (the side of pipe-cap shown as front) in the illustration into holder C.

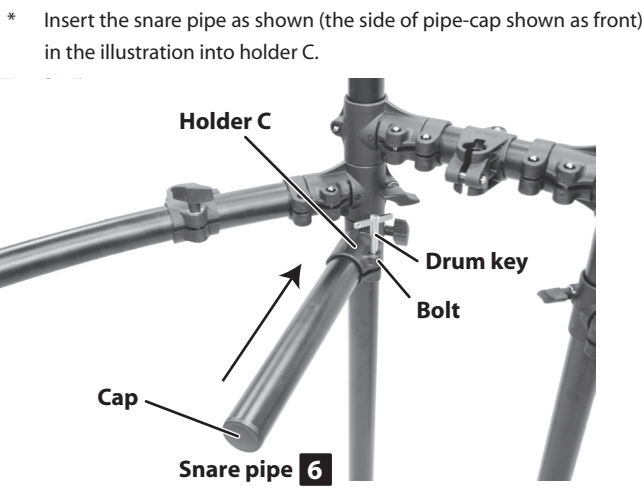

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS	
About ⚠ WARNING and ⚠ CAUTION Notices	
⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

ALWAYS OBSERVE THE FOLLOWING

- WARNING**
 - Do not open or perform any internal modifications on the unit. (The only exception would be where this manual provides specific instructions which should be followed in order to put in place user-installable options.)
 - Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."
 - Never install the unit in any of the following locations:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e.g., baths, washrooms, on wet floors); or are
 - Exposed to steam or smoke; or are
 - Subject to salt exposure; or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty or sandy; or are
 - Subject to high levels of vibration and shakiness.
 - Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.
 - Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.
 - In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.
 - To prevent accidents, never allow small children to play near the stand.
 - Protect the unit from strong impact. (Do not drop it!)
- CAUTION**
 - Make sure to firmly tighten all clamps and attached a pad or unit to it. You should probably also try to make a habit of checking and retightening them if necessary before every performance. You risk injury if you have loose screws or clamps, since a pad or unit can fall unexpectedly.
 - When setting up or storing the stand, be careful not to pinch the fingers you use to handle the stand.

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA EGYPT Al Fany Trading Office 9, 828 Elgar St. Al Iskandariya PHILIPPINES AND E.I. Co., Ltd. Cairo 11541, EGYPT TEL: (02) 415-5311 REUNION Maison P.O. YAM Marcel 25 Rue Jules Horreman, Chaudron - BP 97 491 St. Denis, 97400 TEL: (02) 251-3339 SOUTH AFRICA T.D.M.S. Sound & Music PTY LTD 2 ASTRON ROAD DENVER JONANNESBURG 2018, S.A. TEL: (011) 645-3400 Paul Botheret/PTM Ltd Royal Cape Park, Unit 24 Lindenberg Road, Ottery 7600 Cape Town, SOUTH AFRICA TEL: (021) 799-4900	PHILIPPINES C.A. Vespago & Co. Inc. 339 G/L, Puyat Avenue Makati, Metro Manila 1200, PHILIPPINES TEL: (02) 899-1981 SINGAPORE SWEE LEE MUSIC COMPANY PTE. LTD. 130 Sims Drive, SINGAPORE 367881 TEL: (06) 465-3678 TAIWAN ROLAND TAIWAN ENTERPRISE CO., LTD. Room 5, 8F, No. 112 Chung Shan N. Road Sec. 2, Taipei, TAIWAN, R.O.C. TEL: (02) 224-8621 THAILAND Thera Music Co., Ltd. 105-108 Moo 9, San Sai Road, Bangkok 10110 THAILAND TEL: (02) 224-8621 THAILAND Thera Music Co., Ltd. 105-108 Moo 9, San Sai Road, Bangkok 10110 THAILAND TEL: (02) 224-8621 THAILAND Thera Music Co., Ltd. 105-108 Moo 9, San Sai Road, Bangkok 10110 THAILAND TEL: (02) 224-8621	CURACAO Roland Music Center Inc. Chiswick 30 Curaçao, Netherlands Antilles TEL: (02) 925-0866 DOMINICAN REPUBLIC Roland Music Center Inc. Calle Proyecto Central No.3 Calle la Esplanada Santo Domingo, DOMINICAN REPUBLIC TEL: (009) 461-5005 ECUADOR Roland Music Center Inc. Rumburca 822 y Zarama Cuenca, Ecuador TEL: (099) 4232-364 EL SALVADOR OMNI MUSIC 27 Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (504) 553-3029 MARTINIQUE Roland Music Center Inc. 27, Avenue de la Liberté Martinique 97221 Le Lamentin Martinique, F.W.I. TEL: (596) 596-4260 ARGENTINA Roland Music Center Inc. 27, Avenida Norte y Final Alameda Juan Pablo II, San Salvador, El Salvador TEL: (06) 262-0788 GUATEMALA Casa Instrumental Calle 14, Zona 11, Zona 11 Ciudad de Guatemala TEL: (02) 399-2888 AUSTRALIA/NEW ZEALAND Roland Music Center Inc. 2 Ave. IT, Calle 5.0 San Pedro Sula, Honduras TEL: (5
--	--	--